 


CORDLESS PHONE REPLACEMENT BATTERIES

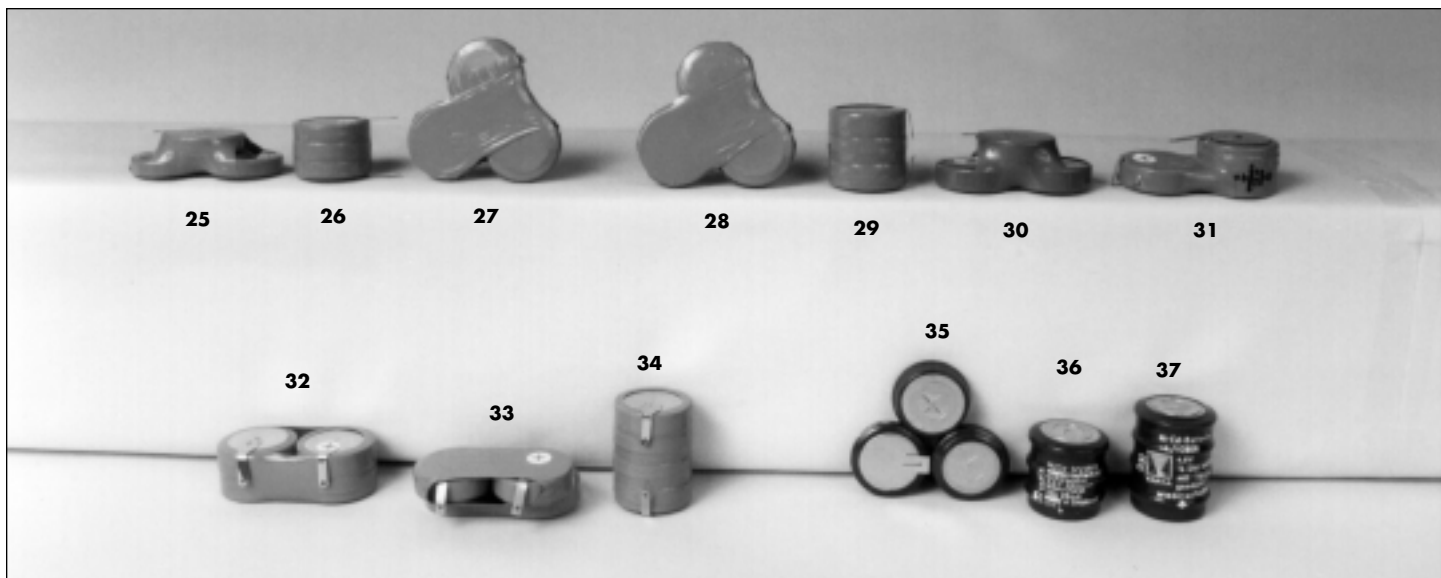

170mAh, 280 mAh Button Cell Packs

PART NO.	V	C	PICT #	CONN LETTER
3/170	3.6	170	25	TABS
3/170-A	3.6	170	25	A
3/170-B	3.6	170	25	B
3/170-M	3.6	170	25	M
3/170-W	3.6	170	25	W
3/170STK	3.6	170	26	TABS
3/170STK-B	3.6	170	26	B
3/170STK-W	3.6	170	26	W
3/170CL	3.6	170	27	TABS
3/170CL-A	3.6	170	27	A
3/170CL-B	3.6	170	27	B
3/170CL-W	3.6	170	27	W
3/280CL	3.6	280	28	TABS
3/280CL-A	3.6	280	28	A
3/280CL-B	3.6	280	28	B
3/280CL-W	3.6	280	28	W

PART NO.	V	C	PICT #	CONN LETTER
3/280STK	3.6	280	29	TABS
3/280STK-A	3.6	280	29	A
3/280STK-AR	3.6	280	29	AR
3/280STK-B	3.6	280	29	B
3/280STK-NT	3.6	280	29	PRESSURE
3/280STK-R	3.6	280	29	R
3/280STK-S3	3.6	280	29	S3
3/280STK-T2	3.6	280	29	T2
3/280STK-T3	3.6	280	29	T3
3/280STK-W	3.6	280	29	W
3/280	3.6	280	30	TABS
3/280-B	3.6	280	30	B
3/280-W	3.6	280	30	W
2x1/280	3.6	280	31	TABS
2x1/280-B	3.6	280	31	B
2x1/280-W	3.6	280	31	W
2x2/280	4.8	280	32	TABS

PART NO.	V	C	PICT #	CONN LETTER
2x2/280-B	4.8	280	32	B
2x2/280-W	4.8	280	32	W
4/280STK	4.8	280	34	TABS
4/280STK-B	4.8	280	34	B
4/280STK-W	4.8	280	34	W
4/280	4.8	280	33	TABS
4/280-B	4.8	280	33	B
4/280-W	4.8	280	33	W
3/280CL-FC	3.6	280	35	TABS
3/280CL-FC-B	3.6	280	35	B
3/280CL-FC-N	3.6	280	35	N
3/280STK-FC	3.6	280	36	TABS
3/280STK-FC-B	3.6	280	36	B
3/280STK-FC-W	3.6	280	36	W
4/280STK-FC	4.8	280	37	TABS
4/280STK-FC-B	4.8	280	37	B
4/280STK-FC-W	4.8	280	37	W

CORDLESS PHONE CONNECTORS

Add Connector Letter to Pack Part # for Pack w/Connector

N = N.W. BELL



PM = PHONEMATE



R = RADIO SHACK



 
S = S.W. BELL



S3 = RADIO SHACK




T2 = RADIO SHACK

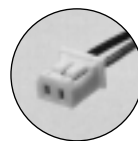

T3 = RADIO SHACK



 W CONN = COBRA, G.E., UNIDEN

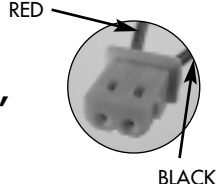

X = RADIO SHACK



21 = SONY

